


Fluted Wall Cladding Installation Guide



NOTE: Prior to installing the Fluted Wall Panel ensure that the wall is flat and solid.

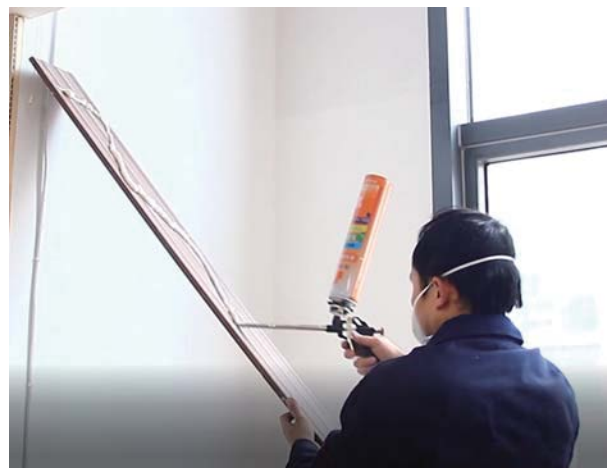

Step One:

Cut the fluted wall panel to your desired length and apply construction adhesive to the back of the panel.



Step Two:

Apply the first panel to the wall and fasten with a nail gun.

Use two finishing nails, one each approx. 2" from the top and bottom of the panels. In between the top and bottom you will need one finishing nail approx. every 12" to 14".

Installation video available online: www.outwater.com

Required Materials & Tools



Fluted Wall Panel



Cap Moulding
(Sold Separately)



Wall Clip
(Sold Separately)



Circular Saw



Nail Gun



Adhesive

Fluted Wall Cladding Installation Guide

Installation video available online: www.outwater.com




Secure the wall clips to the wall with a nail gun and finishing nails.




Step Three:

Use the wall clips and adhesive to attach the fluted wall panels to each other. A typical installation will use 7-8 clips per panel spaced approximately every 12" to 14".

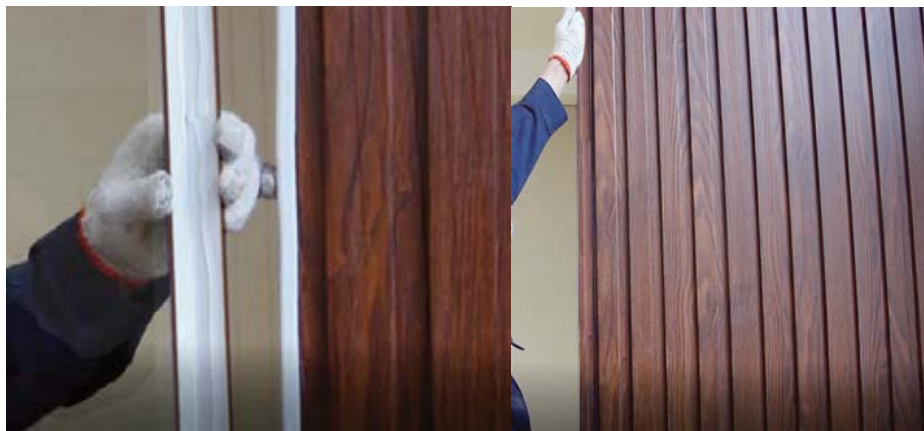

Step Four:

Cap moulding can be used to give a finished appearance when you reach the edge of the wall or to transition between walls. Use the construction adhesive to secure it to the wall.

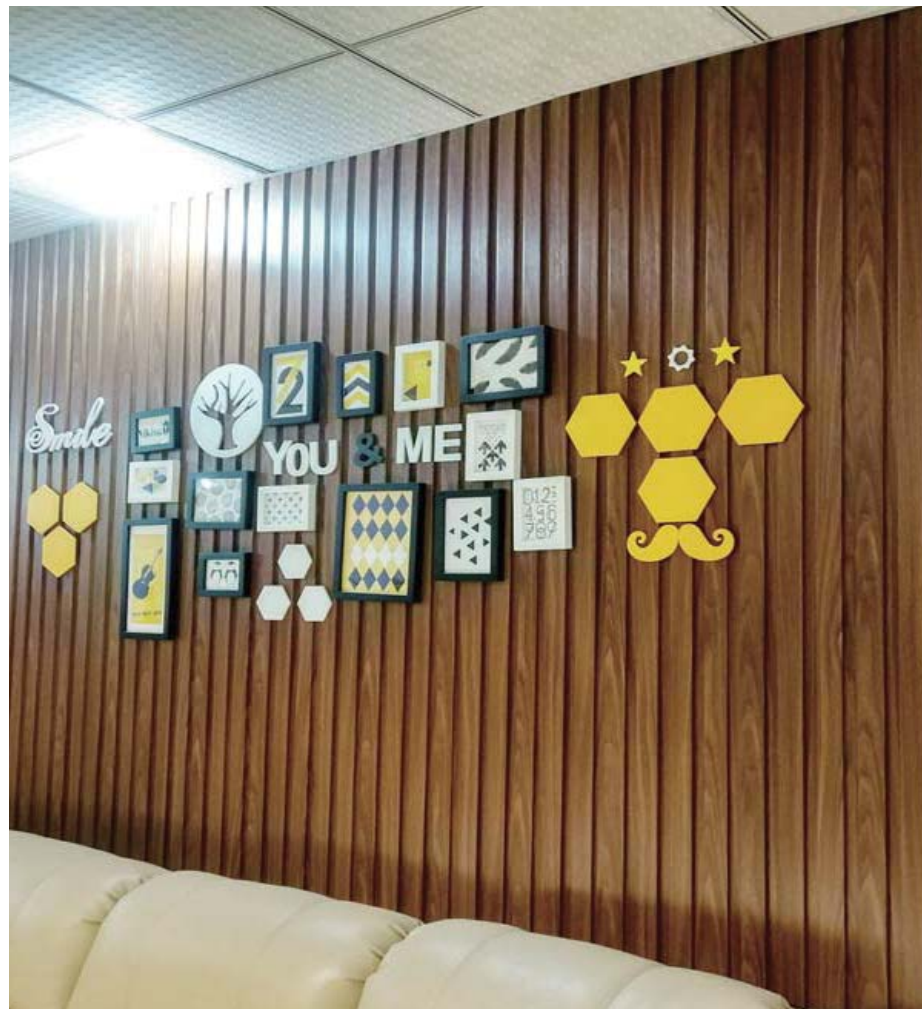

Completed Installation.