


Fluted Wall Cladding: Ceiling Installation

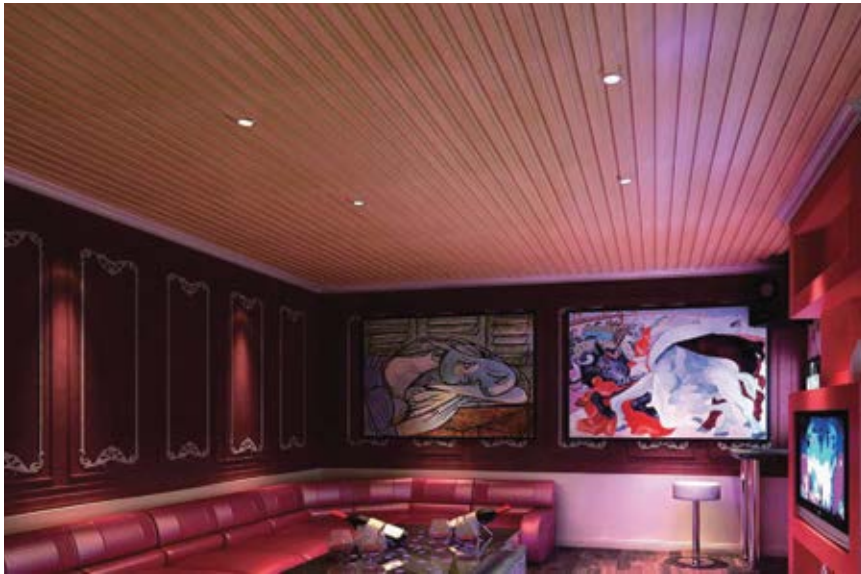

Step One: Install the joists with a nail gun. The joist spacing is 13-3/8" - 15-3/4".

Required Materials & Tools



Fluted Wall Panel



Joist



Clip
(Sold Separately)



Circular Saw



Nail Gun



Step Two:

Position the Fluted Panel near the bottom of the joist.

Fluted Wall Cladding: Ceiling Installation



Step Three: Attach the panel to the ceiling with the clip and nail gun.



Step Five: The second panel is now joined.



Step Four: Attach the next panel into the card slot on first.



Step Six: Continue adding panels until the installation is complete.