




Mark out position on both surfaces to align.

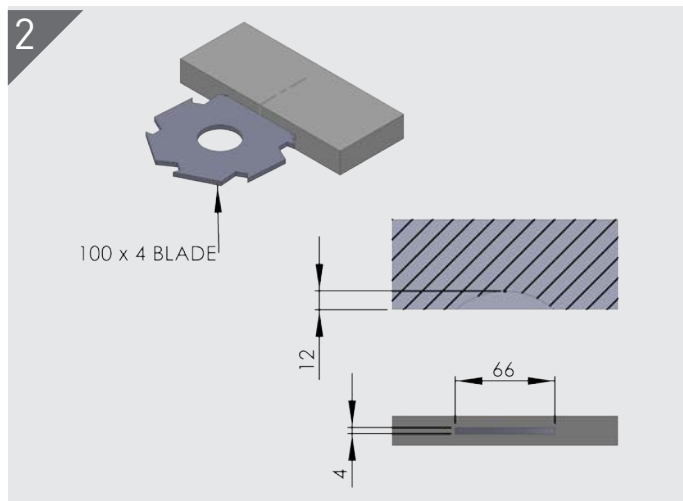


Set depth stop to #20 on Biscuit cutter and plunge in on centreline position or cut position with router using 4mm bit.

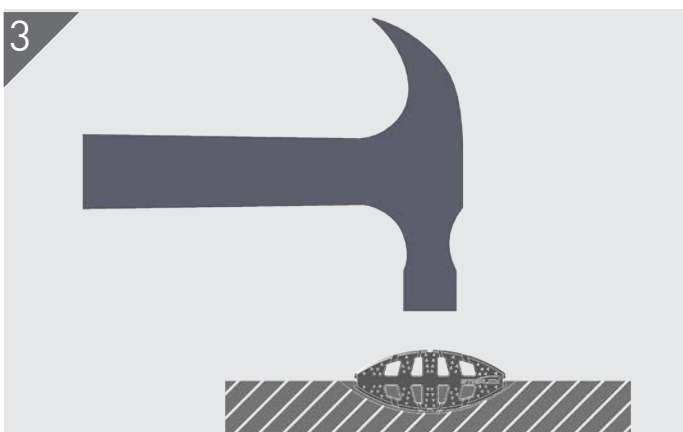


Position Biscuit at centreline and knock in with hammer, unique grips will hold in place (no glue required). Glue may be used (CA). Glue will travel into void areas.

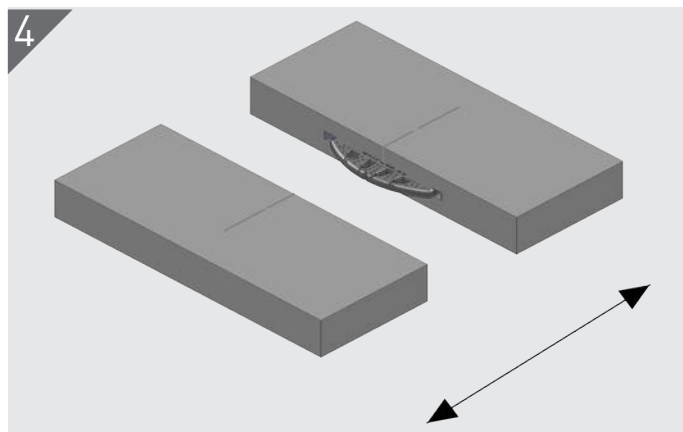

Position both surfaces together aligned and move together (180 degree joint).

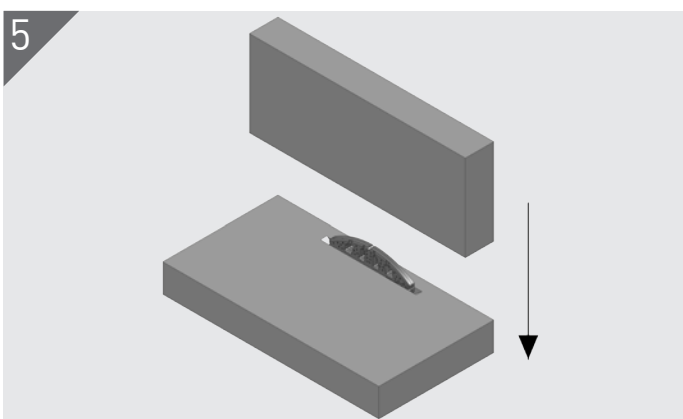

Position both surfaces together align and move together (90 degree joint).

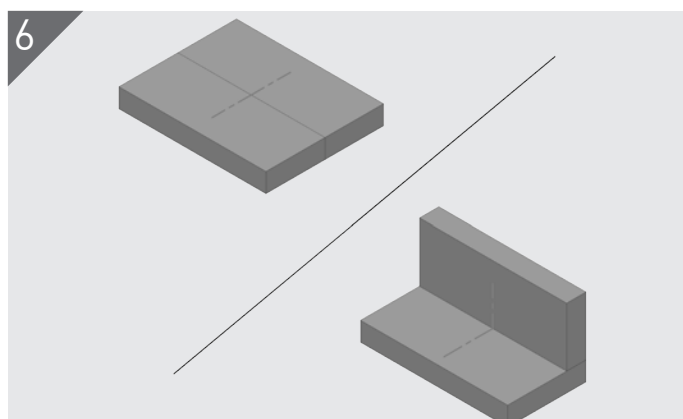

Result is a tight connection (glue may be required along surface edge).