

INSTALLATION GUIDE FOR SL8*-SERIES LAZY SUSANS


Usually the aluminum Lazy Susan has rubber feet and countersunk holes already, you just need to find the center and screw it to your wood. **Below we will show you the detailed steps, which is much easier than you think.**

First, you need a proper top for you Lazy Susan.


The top can be any material. Countertops with particularly smooth surfaces such as marble and glass can be used without installation. Here we mainly talk about the installation of wooden countertops. Make sure you choose the right top size according to your application. As different applications may need different sizes of tops. This will be related to the rotation effect of your final product. If you have any questions about this, you can consult our sales staff before buying.

Second, find the center on the top.

Below, round and square panels are shown for your reference.

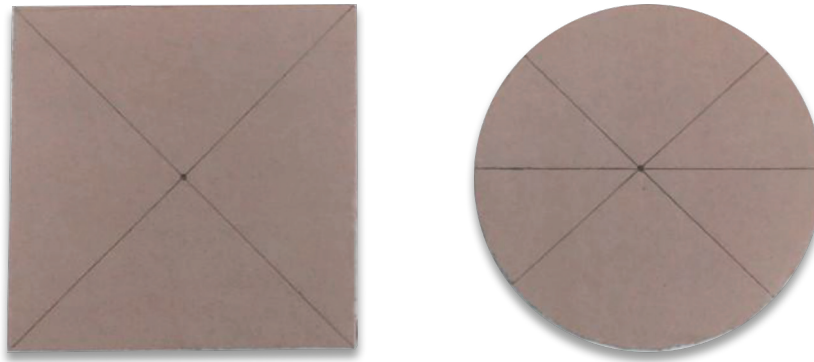

Third, align the center of the Lazy Susan with the center on the top.

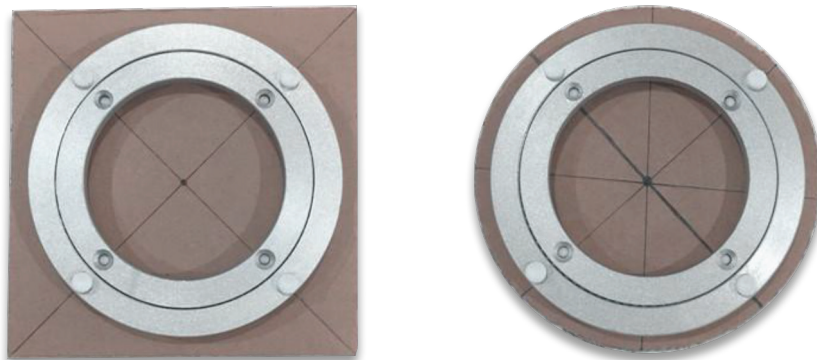

S8L-1800C has counter sunk holes on both sides. The holes in the outer ring are for installing/ mounting our bearings to chairs, display shelves, etc. The holes on the inner ring are for attaching to displays.

Fourth, screw the Lazy Susan on the top.

Make sure that the tightness of all screws is balanced/uniform when assembling.



Finally, turn the top upside down and rotate it. The installation is complete.