

## STANDARD DOOR SURROUND INSTALLATION

**Please Read  
And Follow All  
Installation  
Instructions  
Carefully**

**Important Information:**

Use only premium polyurethane construction adhesive and mechanical fasteners (screws or nails) to install the door surround.

### Step 1. Determine Door Opening Size (X Dimension)

Measure the width of your door or door opening. Determine whether brickmold is required. (Storm doors require brickmold.) *See Figure 2.*

### Step 2. Determine Crosshead Width (A Dimension)


Measure the width of the pilaster and multiply x 2. Add the "X" dimension calculated in Step 1. This is the length of the crosshead breastboard required.

If you are not using a custom-fit crosshead and your *crosshead is too long*, cut it in half and trim from the center to the appropriate length and then use a keystone to cover the cut.


If the your *crosshead is too short*, you will need to order a second crosshead and piece them together at the center and then use a keystone to cover the cut.

### Step 3. Install Pilaster, Crosshead and Keystone


Affix each piece to the wall using a premium polyurethane construction adhesive and mechanical fasteners (screws or nails).

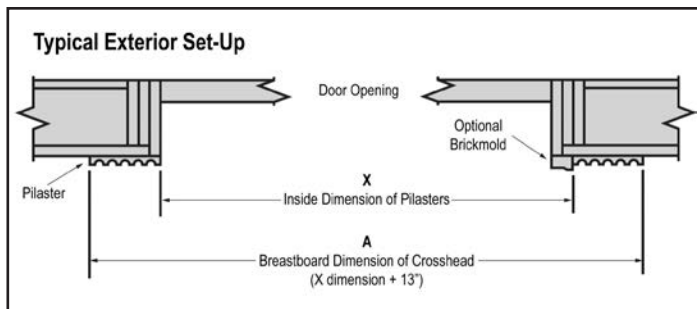

**Figure 1**

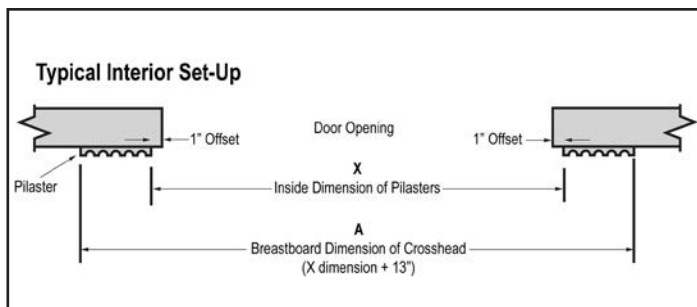

**Figure 2**

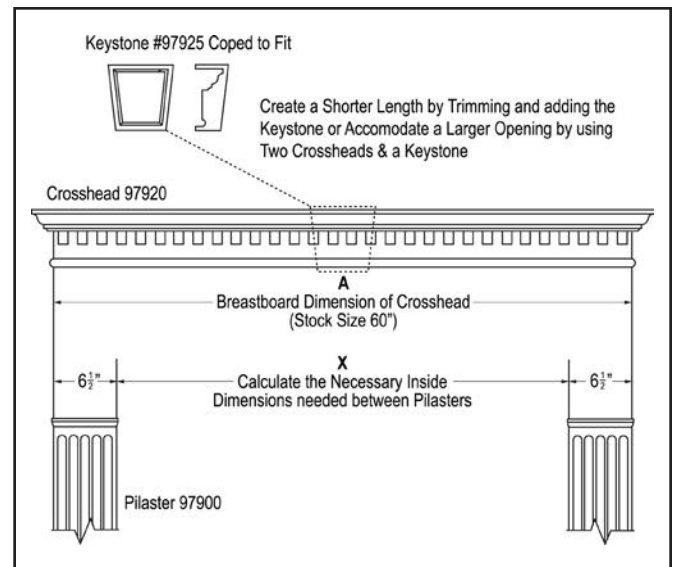

**Figure 3**