
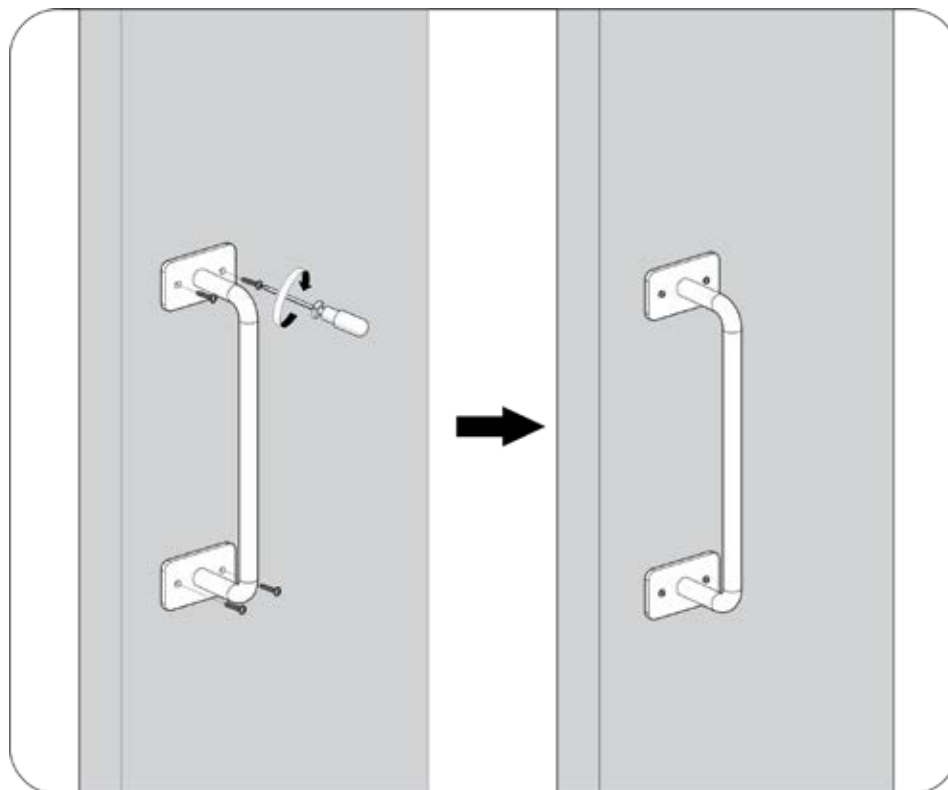


INCLUDES

| | |
|-----------------------|----|
| Rustic Barn Door Pull | x1 |
| ST4.2x25 Screw | x4 |

TOOLS REQUIRED

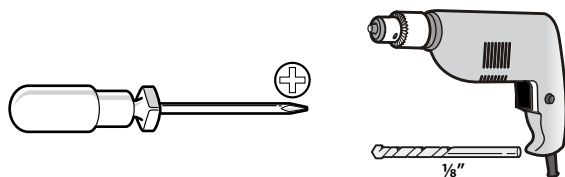

Recommended Installation: Mark screw hole locations on the door with a pencil. Drill 1/8" pilot holes to help prevent the wood from splitting (being careful to go through the door). Use a screwdriver to secure the pull to the door with the screws provided.