


# FURNITURE


## SLIDING DOOR HARDWARE

MODEL No. FSDH-STRAPS-\*

INSTALLATION MANUAL FOR ADDITIONAL DOORS

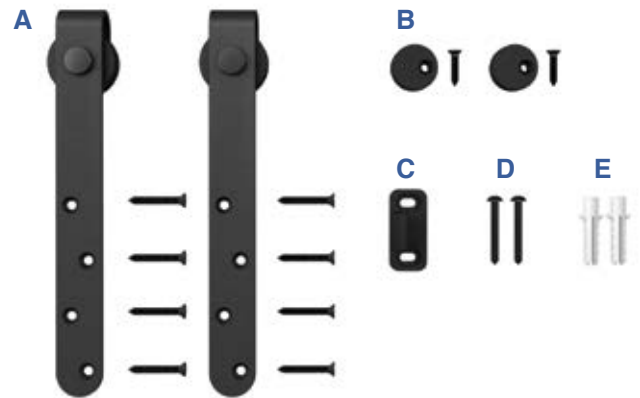

### TOOLS REQUIRED

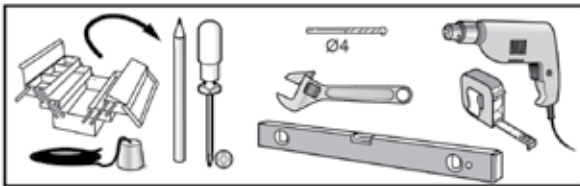


- Plumb Line
- Pencil
- Phillips Head Screwdriver
- 4mm Drill Bit
- Wrench
- Level
- Power Drill
- Tape Measure

### INCLUDED IN KIT


<b>A</b>	Door Roller Hardware	x2
<b>B</b>	Anti-Jump Disk	x2
<b>C</b>	Routed Door Guide	x1
<b>D</b>	ST4.2x35 Screw	x2
<b>E</b>	Anchor	x2

# INSTALLATION

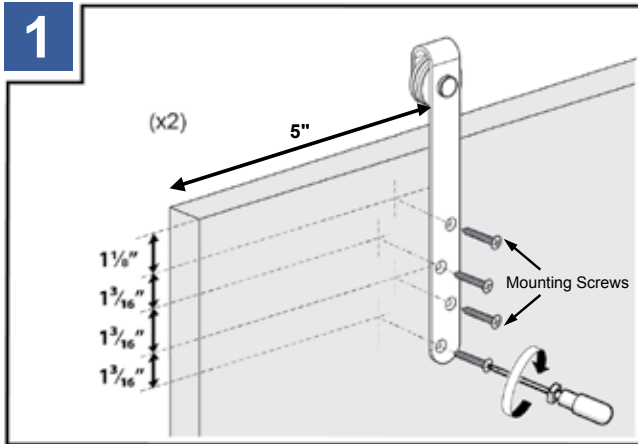


Drill holes into the doors as indicated. Attach the roller straps [A].


It is suggested that the roller strap [A] be mounted 5" from the edge of the door to the neck of the roller strap.

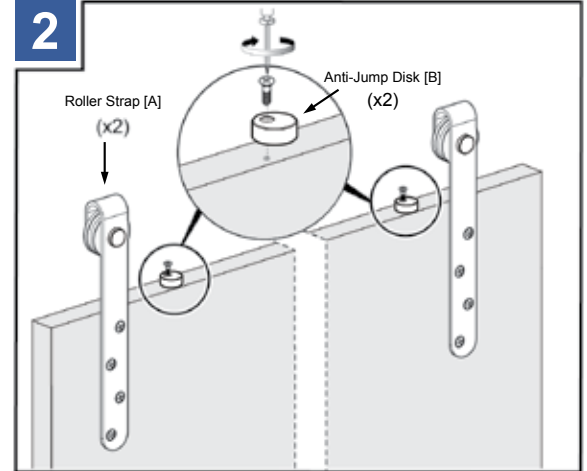

Attach the anti-jump disks [B] to the doors.

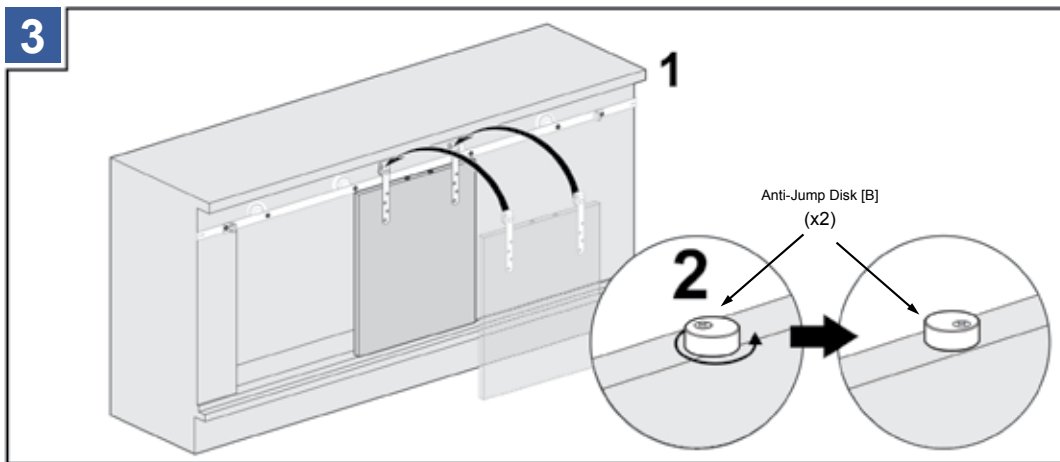

Attach the doors to the rail and lock the anti-jump disks [B] into position. Doors should be routed beforehand if using the routed door guide [C].

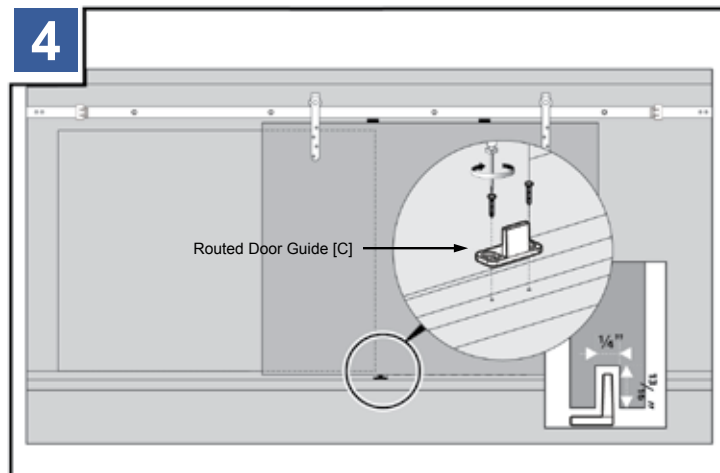

If using the routed door guide [C], install at this time.

Outwater Industries, Inc. assumes no liability for improper installation.