


# MDF *Screening Panels*

## TOOLS and MATERIALS REQUIRED for INSTALLATION:

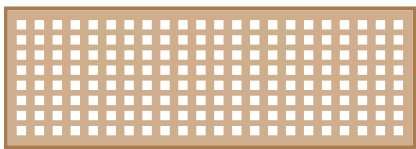

2 ft. x 6 ft. MDF Screening Panel



Saw



Wood  
Glue



Tape  
Measure



Hammer  
+ Nails



Spray Paint or  
Paint + Roller

## PREPARATION:

- Our MDF screening panels are sold unfinished and may require sanding.
- Panels are produced in “landscape” [2 ft. high x 6 ft. wide]
- Make sure that your cabinets have a frame to attach and conceal the panel.
- Measure the inside of the cabinet or opening where the screening panel will be inserted.
- Cut the panel to size.
- The panel **MUST BE PRIMED** prior to painting.
- When painting the MDF screening panel, it is recommended to use a roller or spray paint. Using a paint brush is more difficult and tends to cause brush marks.
- The MDF screening panel may be painted on both sides, if desired.

## INSTALLATION:

Once preparations are complete, the MDF screening panels can be nailed or glued to the cabinet wall.

