

SLATWALL PANELS: WALL MOUNT INSTALLATION GUIDE

TOOLS REQUIRED



Pencil



Tape Measure



Safety Goggles



Level




Flat Head Screws



Phillips Screw Driver



Stud Finder

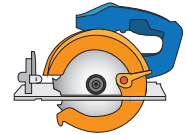

Circular Saw

INSTALLATION INSTRUCTIONS

1. Handle with care. Do not drag the panels - lift to avoid scratching.
2. Using a stud finder, locate and mark the studs for attaching panels to wall.
3. Create a level line at the desired height for the top of the panels.
4. Cut panels with a circular saw, or table saw. To minimize chip-out, the saw blade should enter the grooved side of the panel and exit the back.
5. If stacking, install the bottom panels first. Panels come with a half groove on the top and bottom for stacking purposes.
6. Screw the fasteners through the grooves into the stud wall.
7. It is recommended to use furring strips when attaching to cement walls.
8. Use 1-1/2" screws directly onto studs - 2" screws if going through drywall.
9. Fasten screws into every other groove, each stud - 16" on center studs are recommended.
10. For panels with metal inserts, pre-drill and screw through the back of the metal insert to anchor it with the panel to the stud. It is recommended to use a screw with a smaller head to fit through the opening in the insert (#6 panhead screw).
11. Clean with a soft cloth and water. Do not use harsh, abrasive cleansers.



Installation Diagram

